

Control4 SR-250 Remote



To Turn on System

Press Watch Button
Then Press Select Button
System will power on
Satellite/Cable is the default,
So any time the system is powered on
It will go directly to Satellite/Cable TV

To Watch DVD/Bluray

Press Watch Button
Then select DVD/Bluray from
LCD screen on remote
With the down arrow under select
When highlighted press select button
LCD Screen on remote will say **DVD**

To Listen to CD player

Press Listen Button
Then select CD from LCD screen on remote
With the down arrow under select
When highlighted press select button
LCD Screen on remote will say **CD**

To Play Xbox, Wii or PS3

Press Watch Button
Then select Xbox, Wii or PS3 from
LCD screen on remote
With the down arrow under select
When highlighted press select button
LCD Screen on remote will say **Xbox, Wii or PS3**

To Turn System off

Press Room Off button
The System will turn off

Repeat these steps to operate

**The other components listed on
You're remote**

The Satellite/Cable box will always stay on. You may need to replace the batteries in remote every 4-6 months. When the batteries are low the system will not Work properly.

To Control another room in the house

Press List Button
Select house from LCD remote screen
Select location from LCD remote screen
Select which room or area you want to control/operate
Now remote will show the selected room
On LCD remote screen
Select Watch or Listen
Then select a source i.e.: CD, SAT, iPod

If you cannot control the system/TV, you can reset the system by powering down the surge protector. Just press the button on the surge protector. Leave off for 3-5 minutes. Then press again to power back up. It will take anywhere from 5-15 minutes for the system to power back up.

If these steps do not resolve your issue please call us at
(209) 931-3457

PRO A/V Home Theater

4049 Cherokee Road Stockton, CA 95215
(209) 931-3457 Office (209) 931-2155 Fax
CA Lic. # 952761

Email: proavem@msn.com
www.proavhometheater.com