

Control4 Touch Screen



Each Touchscreen has the room listed at the top center. Whichever room is listed top is the room you are controlling. Each Touchscreen can control each room in the house

To Use System

Make sure the touchscreen has the room you want to control in the top center

Watch TV

Touch the Watch icon
The screen will change and then Prompt you to choose what to watch (Sat TV, SAT TV 2, ect.) and that will power on TV system
Satellite/Cable is the default,
So any time the system is powered on It will go directly to Satellite/Cable TV


To Listen Music

Press Listen Button
Then select CD from LCD screen on remote
With the down arrow under select
When highlighted press select button
LCD Screen on remote will say **CD**

To Play Xbox, Wii or PS3

Press Watch Button
Then select Xbox, Wii or PS3 from LCD screen on remote
With the down arrow under select
When highlighted press select button
LCD Screen on remote will say **Xbox, Wii or PS3**

To Turn System off

Press  Off button symbol
The system will ask are you sure
Select Yes or No- Yes
Then System will turn off

**Repeat these steps to operate
The other components listed on
You're remote**

The Satellite/Cable box will always stay on.
You may need to replace the batteries in remote every 4-6 months. When the batteries are low the system will not Work properly.

To Control another room in the house

Press List Button
Select house from LCD remote screen
Select location from LCD remote screen
Select which room or area you want to control/operate
Now remote will show the selected room
On LCD remote screen
Select Watch or Listen
Then select a source i.e.: CD, SAT, iPod

PRO A/V Home Theater

4049 Cherokee Road Stockton, CA 95215
(209) 931-3457 Office (209) 931-2155 Fax

CA Lic. # 952761

Email: proavem@msn.com
www.proavhometheater.com